

Tools Required: (Not included)

- A. Phillips head screwdriver
- B. Flat head screwdriver
- C. 4mm open wrench
- D. 8mm open wrench
- E. 19mm open wrench

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before removing or installing the batteries. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Remove the six screws on the deck using a phillip scw driver (note) the two screws on the back are held by size 8mm nuts, then remove two 4mm hexagonal screws.

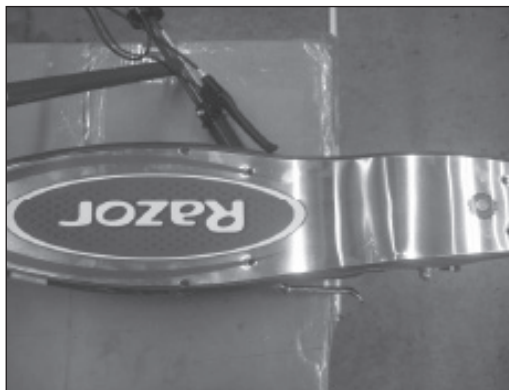


Figure 1

Step 2

Remove the deck from the unit and remove 2 screws on battery holder.



Figure 2

Step 3

Disconnect the battery from controller

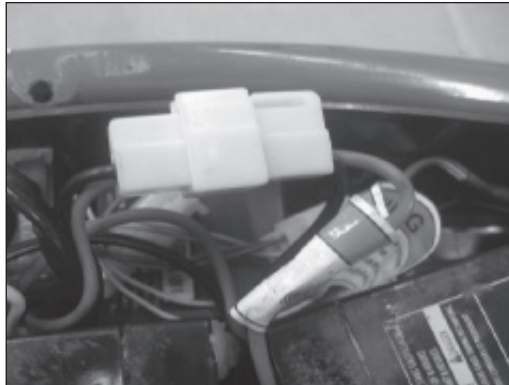


Figure 3

Step 4

Remove batteries from tray to give you access to the charger port.



Figure 4

Step 5

Using a flat screw driver remove the silicon at the back of the charger port to have access to the secure nut and using a 19mm open wrench loosen up the nut in a counter clock motion.

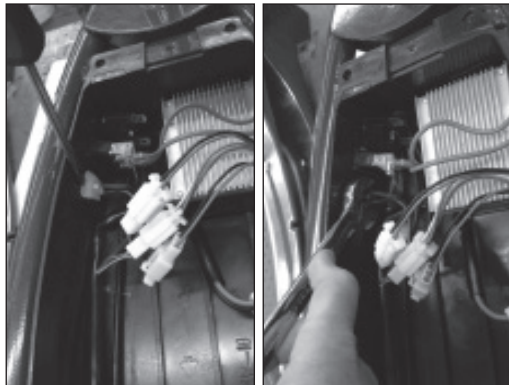


Figure 5

Step 6

Disconnect the charger port connector from the controller and using a small pointy object depress the locking pins on the prongs and push them out of the connector then disconnect the black wire that is connected on the top prong of the on/off switch and remove old charger port from the tray.

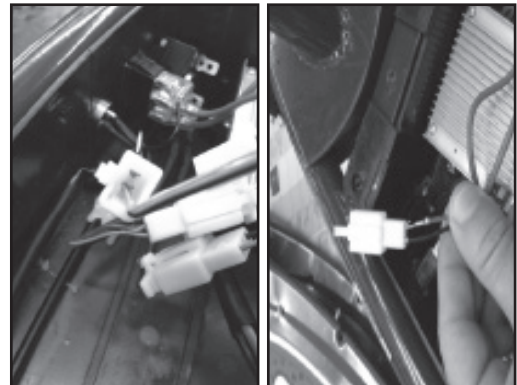


Figure 6

Step 7

Reverse the procedures

- Place the charger port back on the tray, see photo for the position of the wires.
- Re-connect the wires to the reset button
- Re-connect the Battery and Control Module
- Place the Bracket back on the top of the battery
- Re-attach Deck with 8 screws

ATTENTION: Charge battery 12 hours before using