



**E200<sup>®</sup>, E300<sup>®</sup> Series  
KICKSTAND  
REPLACEMENT PROCEDURES**  
PART # W13112099028 (E200)  
PART # W13113614028 (E300)

**Required Tools: (Not included)**


- A. Phillips screwdriver
- B. 8 mm wrench
- C. 8 mm Allen wrench
- D. 4 mm Allen wrench

**⚠ WARNING**

**⚠ CAUTION:** To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


**Step 1**

Using a Phillips screwdriver, remove the four (4) screws on the deck cover. The locations of the screws are circled in the image below.

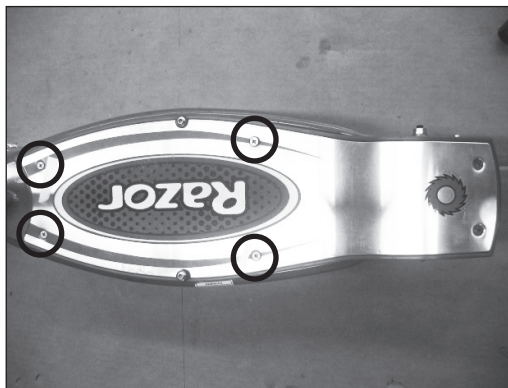


**Step 2**

Using a Phillips screwdriver and an 8 mm wrench, remove the two (2) nuts and screws on the tail of the deck cover.

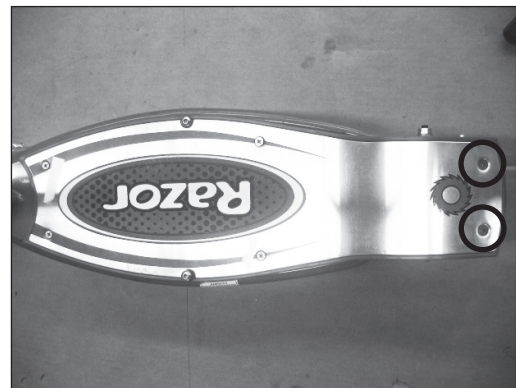

### Step 3

Using a 4 mm Allen wrench, remove the two (2) hexagonal screws on the deck cover. The locations of the screws are circled in the image below. Remove the deck cover and set aside.

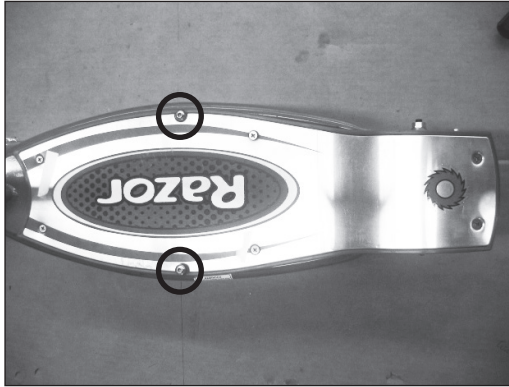


### Step 4

The hex bolt next to the motor holds the kickstand on the frame. The location of the hex bolt is circled in the image below.




### Step 5

Using an 8 mm Allen wrench, remove the bolt and kickstand.

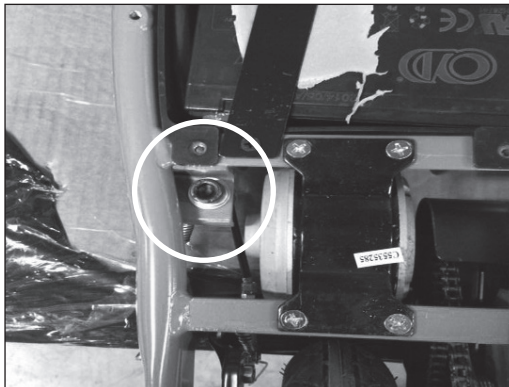

### Step 6

Reverse steps for installation of new kickstand.

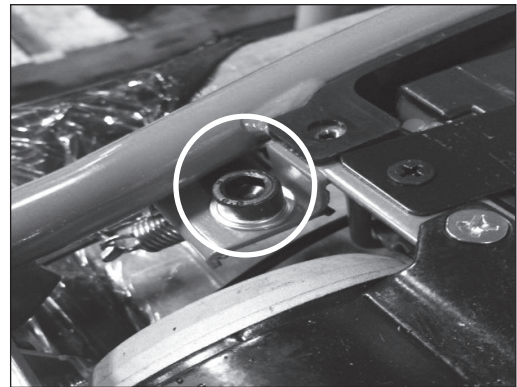

### Step 7

Reverse the steps.

- Reposition the deck cover and attach with the screws and nuts that were removed in Steps 1-3.

**ATTENTION: Charge battery 12 hours before using.**