

**Required Tools: (Not included)**

- 5 mm Allen Wrench
- 6 mm Allen Wrench
- Phillips Screwdriver

**⚠ WARNING**


**⚠ CAUTION:** To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

**Step 1**

Remove the rear left wheel to better access the chain guard. Using a 6 mm Allen wrench, remove the four (4) bolts that hold the wheel in place. Set the wheel aside.


**Step 2**

Using a Phillips screwdriver, remove the screw on top of the chain guard.

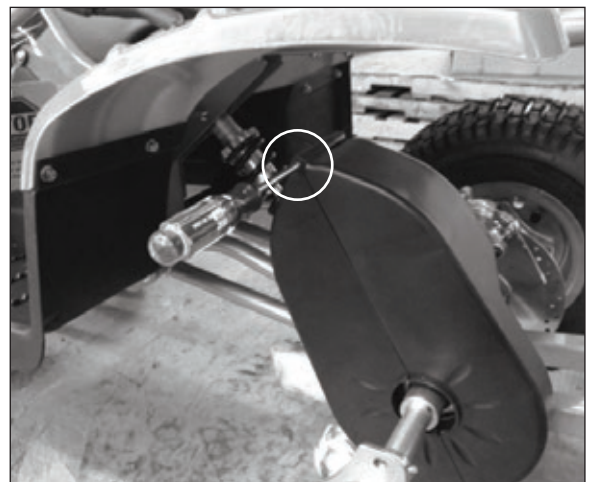


### Step 3

Remove the two (2) screws located on the bottom side on the opposite side.

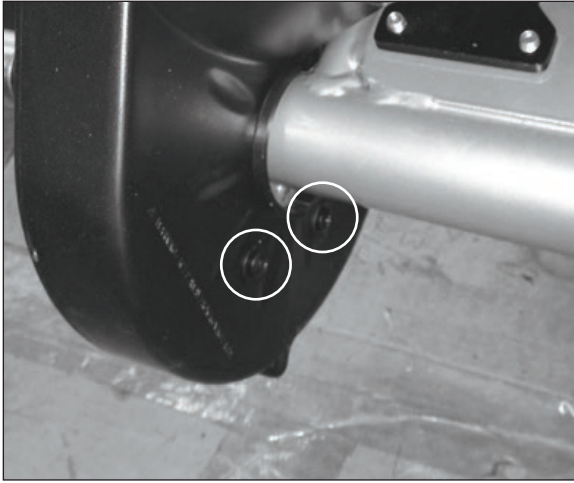


### Step 4

Remove one (1) screw located on the left side on the center of the chain guard. Once the screw is removed, separate the chain guard and remove it from the unit.

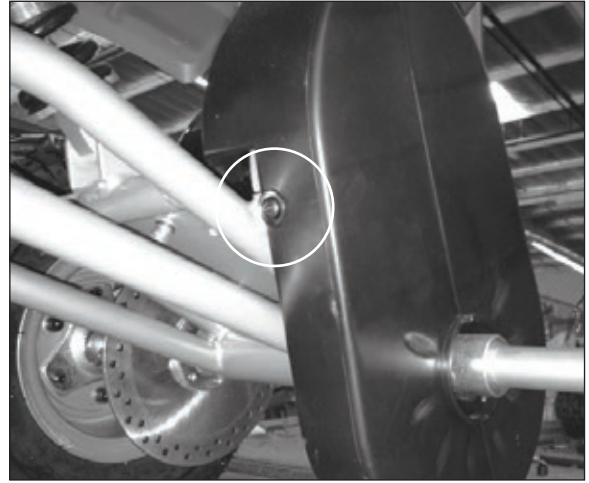


### Step 5

Using a 5 mm Allen wrench, remove the two (2) bolts that hold the chain tensioner onto the motor.

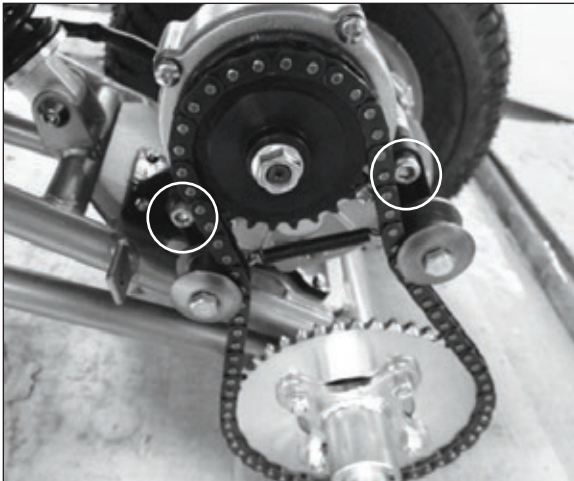

### Step 6

Replace with a new chain tensioner. This is a self-adjusting chain tensioner and there is no need for adjustment.

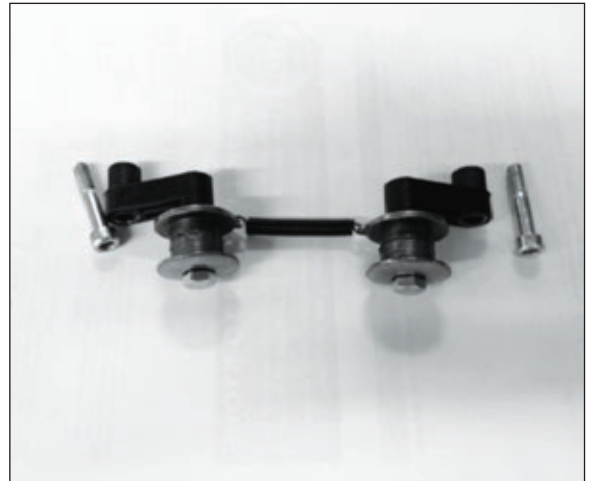

### Step 7

Insert new chain tensioner, then reverse steps 1 through 6.

**ATTENTION: Charge battery 12 hours before using.**