

Step 1

Using a 5mm Allen Wrench remove four hex screws that hold the seat in place

**Step 2**

Using a 5mm Allen wrench remove four hex screws located two on each side of the battery cover and remove cover being carefull not to pull the wires.



Step 3

 
Using a 5mm Allen wrench loosen up the hex bolts from the clamp on the steering wheel and remove the hex bolt from the top of the steering shaft, pull the steering wheel out from the shaft.

**Step 4**

 
Using a phillips screw driver remove the two screws that hold the steering column cover and remove, Using a 5mm Allen wrench loosen up the bolt on the brake lever and remove it from the steering wheel.

**Step 5**

Locate and disconnect the brake lever wire from the controller.

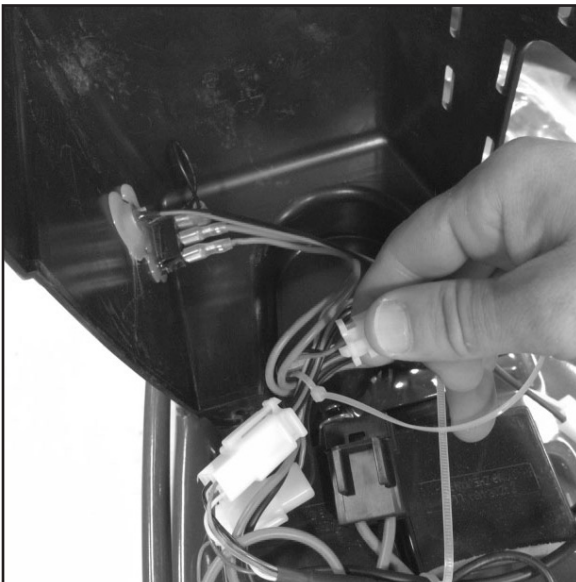**Step 6**

Flip the unit sideways and using a 10mm open wrench loosen up the lock nut that secures the brake cable to the brake drum.

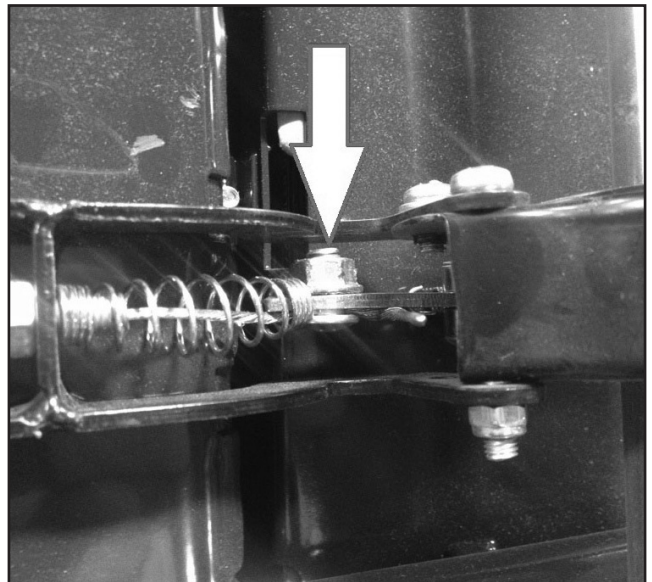



DRIFTER BRAKE LEVER REPLACEMENT PROCEDURES

Step 7

Reverse the procedures

Attention: Charge battery 12 hours before using