

DUNE BUGGY THROTTLE INSTALLATION INSTRUCTIONS

Tools Required: (Not included)


- A. Phillips head screwdriver
- B. 2.5mm Allen wrench
- C. 4mm Allen wrench

- D. 5mm Allen wrench
- E. Flat head screwdriver


CAUTION: To avoid potential shock or other injury, turn power switch <u>OFF</u> and disconnect charger before attempting these procedures. Failure to follow these steps in the correct order may cause irreparable damage.



Using a Phillips head screwdriver, remove the four Phillips screws at the back of the battery cover at the rear of the product.

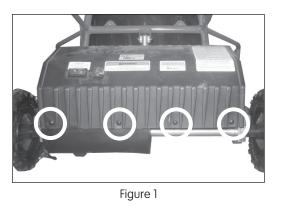


Step 3

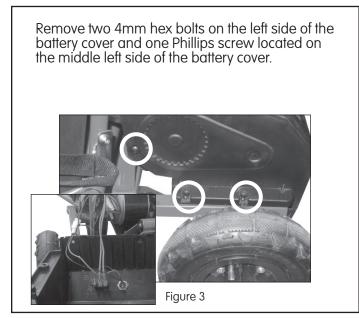


Step 2

Using a 4mm Allen wrench, remove two 4mm hex bolts on the right side of the battery cover.

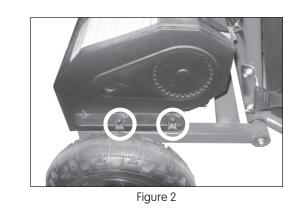


Step 4

Carefully cut the zip tie holding the wires together and remove the cable wrap. **Note:** Save the cable wrap for reassembly. Starting from the steering wheel, follow the throttle wire and disconnect it from control module by depressing the tab.

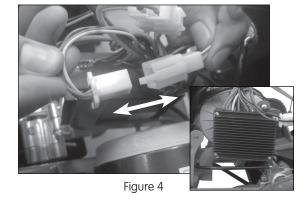

Need Help? Visit our website at www.razor.com or call toll-free at 866-467-2967 Monday - Friday 8:00am - 5:00pm Pacific Time.

Step 5

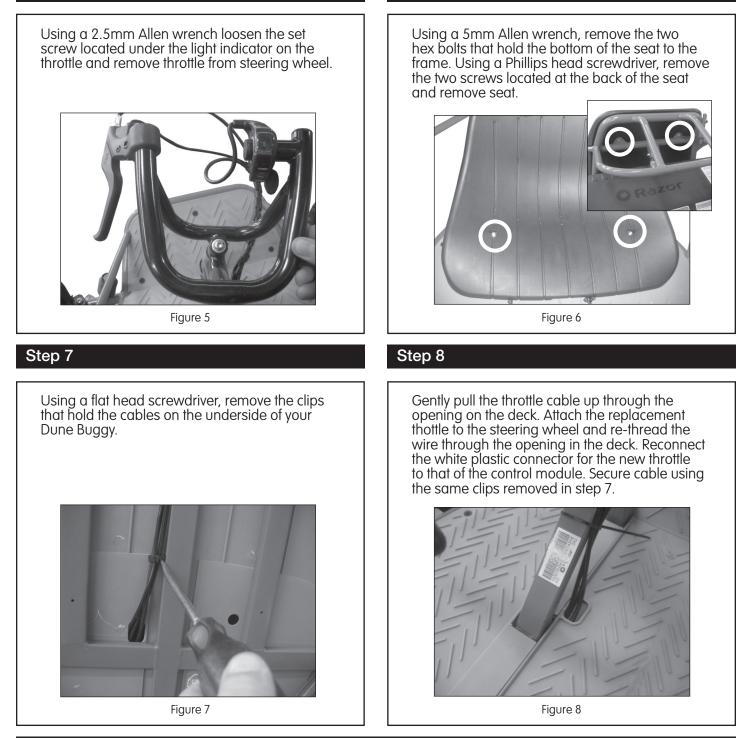

Step 6

Step 9

Reverse steps:

- 1. Replace the battery cover and seat.
- 2. Re-fasten the screws that hold the battery cover and seat in place.

ATTENTION: Charge unit at least 18 hours before riding.

v1 - 2/10