



**E200<sup>®</sup>, E300<sup>®</sup> Series  
KICKSTAND  
REPLACEMENT PROCEDURES**  
PART # W13112099028 (E200)  
PART # W13113614028 (E300)

**Required Tools: (Not included)**


- A. Phillips screwdriver
- B. 8 mm wrench
- C. 8 mm Allen wrench
- D. 4 mm Allen wrench

**⚠ WARNING**

**⚠ CAUTION:** To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


**Step 1**

Using a Phillips screwdriver, remove the four (4) screws on the deck cover. The locations of the screws are circled in the image below.

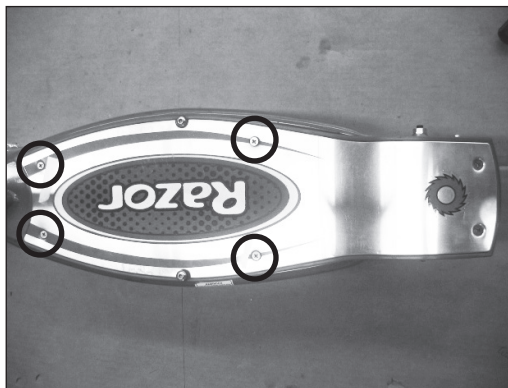


**Step 2**

Using a Phillips screwdriver and an 8 mm wrench, remove the two (2) nuts and screws on the tail of the deck cover.

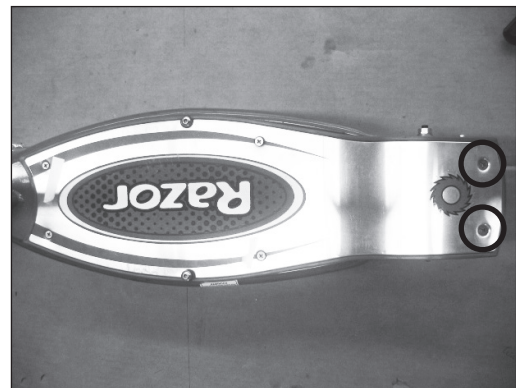

### Step 3

Using a 4 mm Allen wrench, remove the two (2) hexagonal screws on the deck cover. The locations of the screws are circled in the image below. Remove the deck cover and set aside.

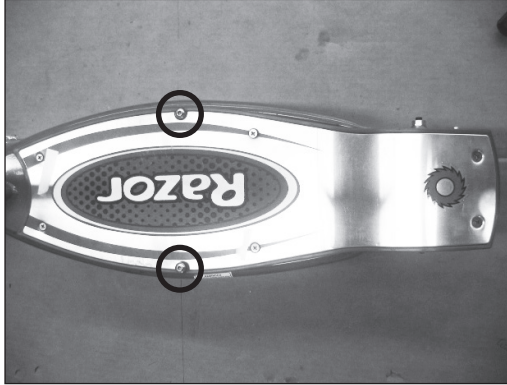


### Step 4

The hex bolt next to the motor holds the kickstand on the frame. The location of the hex bolt is circled in the image below.




### Step 5

Using an 8 mm Allen wrench, remove the bolt and kickstand.

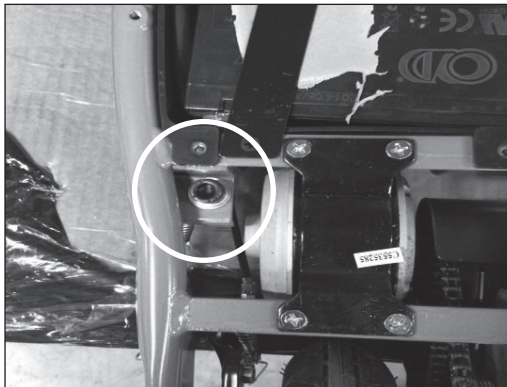

### Step 6

Reverse steps for installation of new kickstand.

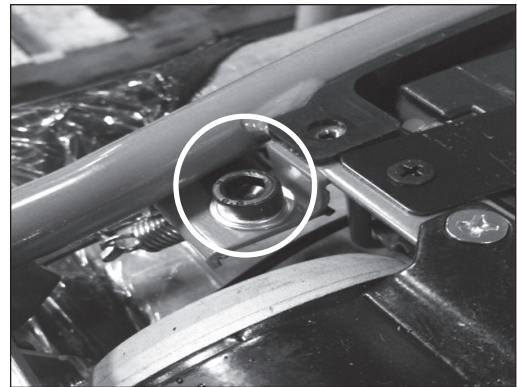

### Step 7

Reverse the steps.

- Reposition the deck cover and attach with the screws and nuts that were removed in Steps 1-3.

**ATTENTION: Charge battery 12 hours before using.**