

Required Tools: (Not included)

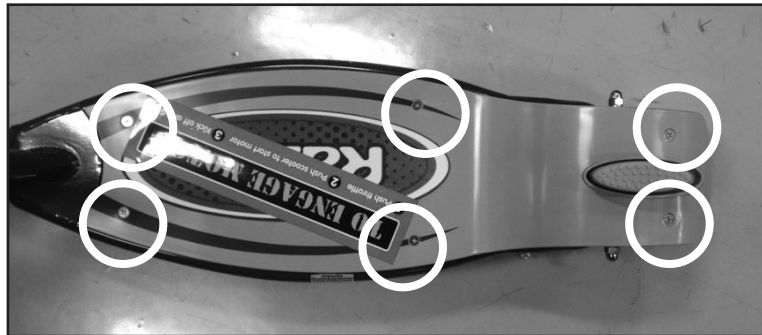
- Phillips screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before performing any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips screwdriver, remove the six (6) screws on the deck cover. The locations of the screws are circled in the image below. Remove deck cover and set aside.

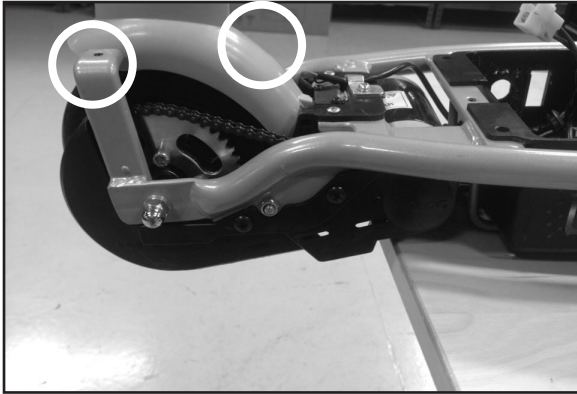
**Step 2**

Using a Phillips screwdriver, remove the two (2) screws on the battery holder. The locations of the screws are circled in the image below. Remove the battery from the tray and set aside.



Step 3

Using a Phillips screwdriver, remove the two (2) screws on the Chain Guard. The locations of the screws are circled in the image below. Remove the Chain Guard and set aside.

**Step 4**

Using a Phillips screwdriver, remove the three (3) screws that hold the motor to the frame. The locations of the screws are circled in the image below.

**Step 5**

Disconnect the motor from controller. Using a small screwdriver or even a paper clip, depress the locking pin on the prongs and remove the connector from the wires. If you are not reusing your motor you can just cut the wires.

**Step 6**

- Reverse the procedures.
- Mount your motor on the frame and insert the wires into the battery tray.
- Before securing the motor with the screws install the chain onto the sprocket on motor and then fasten the screws.
- Install the white connector on the wires from motor (blue wire on motor connects to blue wire from controller and brown from motor connects to brown wire from controller) and reconnect controller and motor.
- Place the battery back on tray and secure them with battery holder and reinstall chain guard.
- Re-attach deck cover with six (6) screws.

Attention: Charge battery 12 hours before using