

Tools Required: (Not included)

- A. Flat head screwdriver
- B. 5mm Allen wrench
- C. 10mm open wrench

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before removing or installing the batteries. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Remove the four hex screws on the deck using a 5mm Allen wrench(note) the two screws on the front are held by size 10mm nuts.



Figure 1

Step 2

Remove the deck from the unit and lift and remove the plastic battery holder.



Figure 2

Step 3

Locate and disconnect the battery and power switch connectors from the controller.



Figure 3

Step 4

Remove the plastic cover at the back of the power switch and disconnect and remove the wire harness.

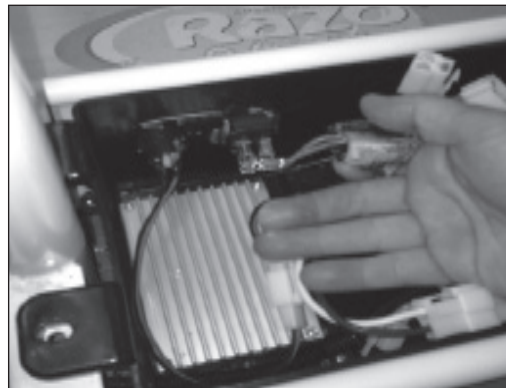


Figure 4

Step 5

Using a flat screw driver remove the silicone at the back of the power switch.

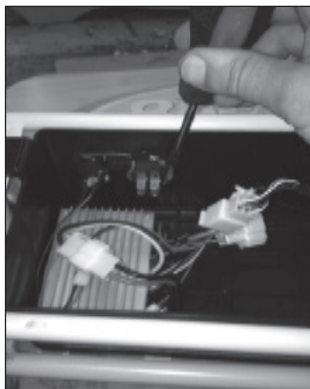


Figure 5

Step 6

Press down on the top of the power switch and push switch out of the battery tray.

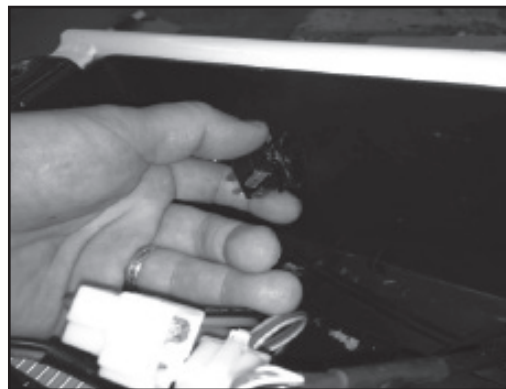


Figure 6

Step 7

Reverse the procedures

- Re-attach Deck with 4 screws.

ATTENTION: Charge battery 12 hours before using