

**Tools Required:** (Not included)

- A. Phillips head screwdriver
- B. 5mm Allen wrench
- C. 10mm open wrench

**⚠ WARNING**

**⚠ CAUTION:** To avoid potential shock or other injury, turn power switch **OFF** and disconnect charger before removing or installing the batteries. Failure to follow these steps in the correct order may cause irreparable damage.

**Step 1**

Remove the four hex screws on the deck using a 5mm Allen wrench (note) the two screws on the front are held by size 10mm nuts.



Figure 1

**Step 2**

Remove the deck from the unit and lift and remove the plastic battery holder.



Figure 2

### Step 3

Disconnect all the connectors by depressing the locking pin.

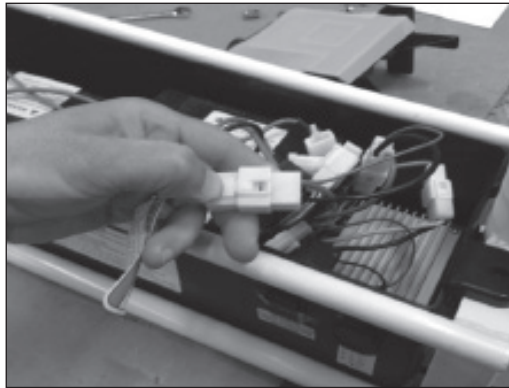


Figure 3

### Step 4

Using a phillips screw driver remove the two screws that hold the controller in place inside the battery tray.

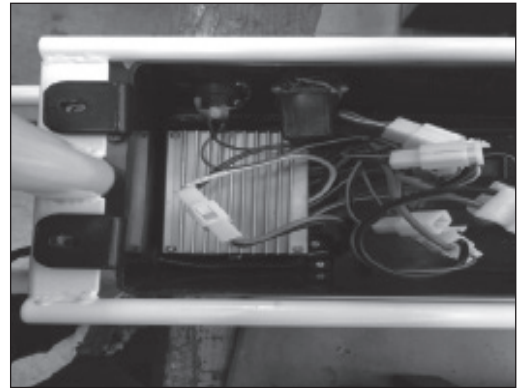


Figure 4

### Step 5

The original controller and the replacement has two connectors for the brake lever, you only need one on this particular unit, brake lever connector can be connected in either connector.

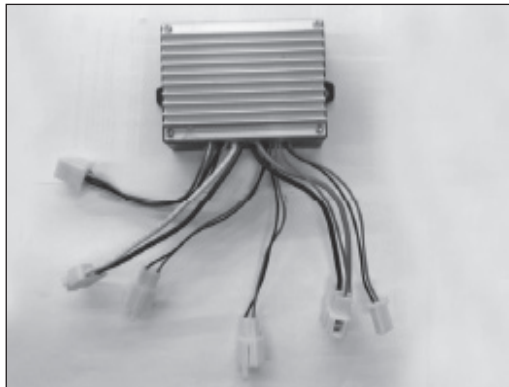


Figure 5

### Step 6

Place the replacement controller back inside the battery tray and secure with screws, reconnect all connectors.



Figure 6

### Step 7

Reverse the procedures

- Re-attach Deck with 4 screws.

**ATTENTION: Charge battery 12 hours before using**