

# HOVERTRAX PRIZMA BATTERY REPLACEMENT INSTRUCTIONS PART# W15156208003

## Required Tools: (Not included)

A. Phillips screwdriver


B. 4 mm Allen wrench

#### **AWARNING**

**ACAUTION:** To avoid potential shock or other injury, turn power switch OFF and disconnect charger before performing any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

### Step 1

Flip the unit over and using a Phillips screwdriver, remove the six screws from the cover without the charger port/switch.

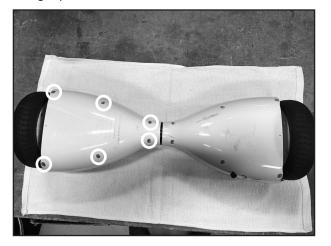

### Step 2

Lift up the cover being careful not to pull the wires and set cover aside.






# HOVERTRAX PRIZMA BATTERY REPLACEMENT INSTRUCTIONS PART# W15156208003

## Step 3

Disconnect the yellow connector from the battery.

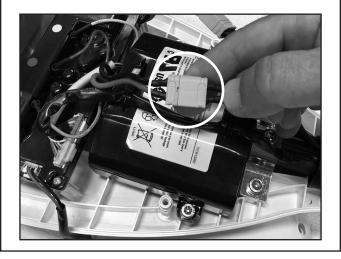

## Step 4

Using a 4 mm Allen wrench, remove the two (2) Allen bolts that hold the battery onto the unit.



### Step 5

#### Reverse the procedures

- Insert new battery in place and secure it with the two (2) Allen bolts.
- Re-connect the yellow connector to the battery.
- Put down the cover and re-attach the six (6) screws.

Attention: Charge battery 6 hours before using.