

### Required Tools: (Not included)

A. 4 mm Allen wrench  
E. Flat screwdriver

B. 5 mm Allen wrench

C. 10 mm wrench

D. Phillips screwdriver

### ⚠ WARNING

**⚠ CAUTION:** To avoid potential shock or other injury, turn power switch OFF and disconnect charger before performing any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

### Step 1

Remove the two (2) Allen bolts under the seat using a 5 mm Allen wrench and a 10 mm wrench to hold the nut from the bottom and then remove the fairing away from the unit.



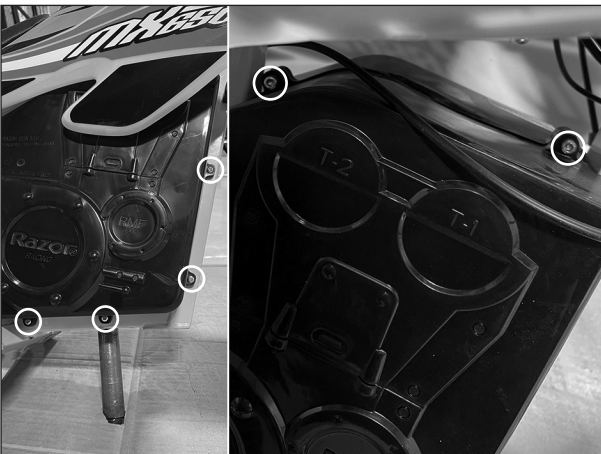
### Step 2

Remove the two (2) Allen bolts under the seat using a 5 mm Allen wrench and a 10 mm wrench to hold the nut from the bottom and then remove the fairing away from the unit.



### Step 3

Remove the four (4) Phillips screws that hold the battery cover, two (2) at the bottom and two (2) at the front. Also remove the two (2) 4 mm Allen bolts on the top of the battery cover. Locate and disconnect charger port and battery connectors from the controller.



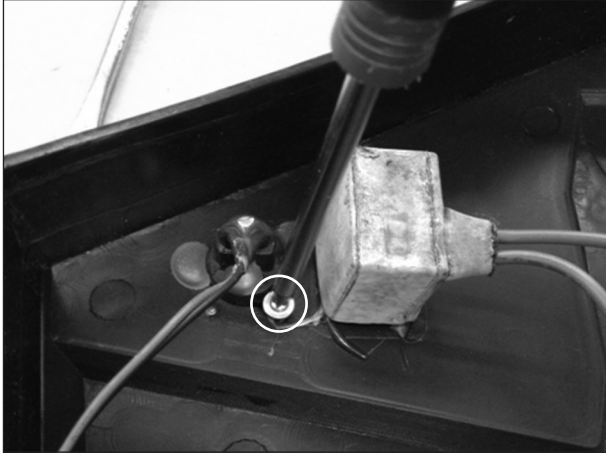
### Step 4

Using a Phillips screwdriver remove two (2) screws on the front of the charger port.

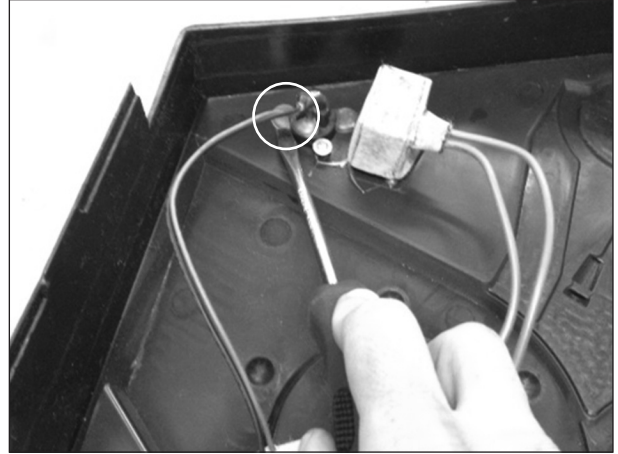


**Step 5**

Using a Phillips screwdriver remove one more screw located on the charger port at the back next to the power switch.

**Step 6**

Using a flat screwdriver remove the silicone at the back of the charger and push the charger port out of the battery cover.

**Step 7****Reverse the procedures**

- Reattach charger port to battery cover.
- Reattach screws to charger port.
- Reconnect charger port and battery connectors to the controller.
- Reattach battery cover and fairing.

**Attention: Charge battery for 12 hours before using.**