


Step 1

Make sure the power switch is in the OFF position before starting any maintenance procedure. Open the seat compartment. Using a Phillips screwdriver remove the four (4) screws on the seat assembly. The locations of the screws are circled in the image below. Remove the seat and set aside.

**Step 2**

Remove three (3) Phillips screws located on each side (left and right) and at the bottom of the front seat cover. The locations of the screws are circled in the image below. Remove seat cover and set aside.

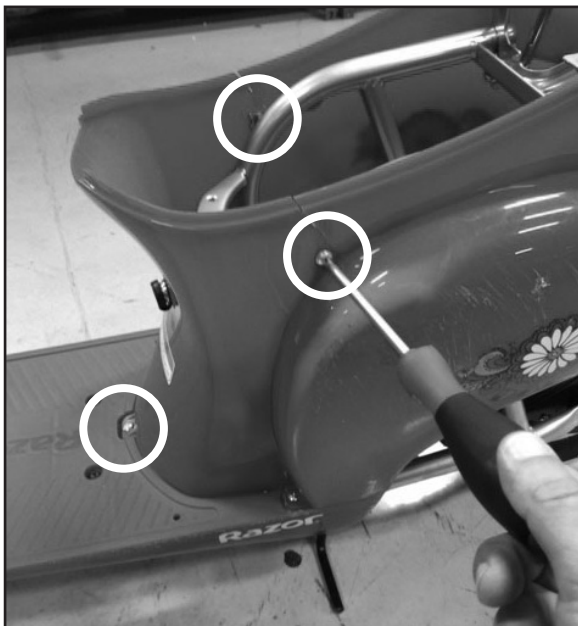

Step 3

Locate and disconnect the brake lever switch from controller, Follow the wire, cable and cut the zip ties that keep them attached to the frame.

**Step 4**

Using a 10 mm wrench loosen the locking nut from the brake drum assembly and pull out the cable.



Step 5

Using a 5 mm Allen wrench loosen the hex bolt from the brake lever and move brake lever away from grip.

**Step 6**

Using a flat screwdriver insert the blade in between the grip and handlebar, apply WD40® or a few drops of soapy water and pull grip and brake lever away from the handlebar.





Step 7

Reverse the procedures to install new brake lever.

Attention: Charge battery 12 hours before using