



C25 & C25 SLA CHARGER PORT REPLACEMENT

C25 PART # W13113290106
C25 SLA PART # W13113291106

Required Tools: (Not included)

 
- A. Phillips screwdriver
- B. Flat screwdriver
- C. 17 mm wrench
- D. Needle nose pliers

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips screwdriver, remove six (6) screws from the deck. Remove the deck from the unit and set aside.

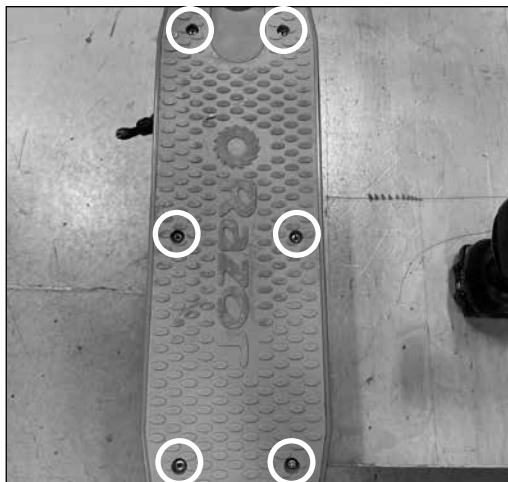


Step 2

Locate and disconnect the battery connector from the controller.



Step 3

 Disconnect the charger port from the controller.

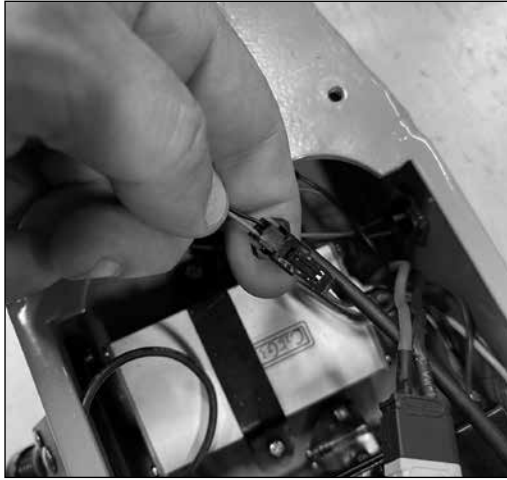

Step 4

Using a flat screwdriver remove the plastic glue at the back of the charger port.



Step 5

Using a 17 mm wrench or long needle nose pliers loosen and remove the lock nut from the charger port and pull the charger port from outside the unit.



Step 6

Reverse the steps.

- Reposition the deck and attach with the screws that were removed in Step 1.

ATTENTION: Charge battery 8 hours before using.