


POWERWING® REPLACEMENT CASTER INSTALLATION INSTRUCTIONS

Tools Required:

- A. 5mm Allen wrench
- B. 13mm Allen wrench
- C. 19mm open wrench


Step 1

Using two 5mm Allen wrenches, remove the rear wheel from the caster. Using a 13mm open wrench, remove the bolt on the bottom of the caster then remove caster.

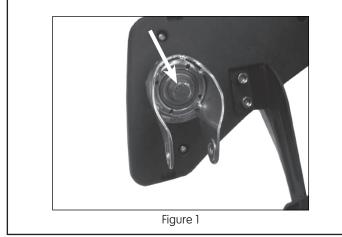

Step 3


Insert replacement caster onto the existing bolt on the platform.

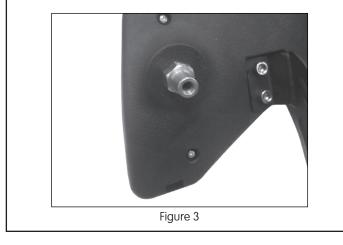

Step 2


Using a 13mm and 19mm open wrench, remove the bolt from the replacement caster.

Note: When removing the bolt, hold the thrust bearing plate firmly against the caster to prevent the ball bearings from falling out.

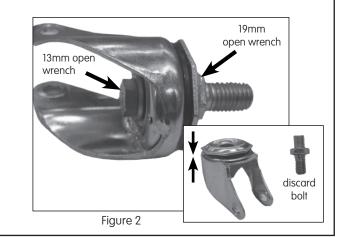

Step 4

Using a 13mm open wrench, tighten bolt until caster is securely in place.

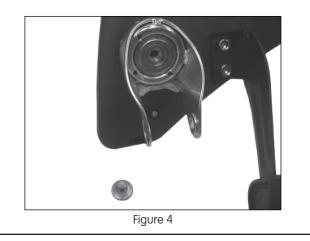

Need Help? Visit our website at www.razor.com or call toll-free at 866-467-2967 Monday - Friday 8:00am - 5:00pm Pacific Time.