

**Required Tool: (Not included)**

A. 6 mm Allen wrench

**⚠ WARNING**

**⚠ CAUTION:** To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

**Step 1**

Using a 6 mm Allen wrench, loosen and remove the bolt that holds the kickstand onto the frame and remove the kickstand.

**Step 2**

Reverse the steps.

**ATTENTION: Charge battery 12 hours before using.**