



**COLORRAVE**  
**PUSH BUTTON THROTTLE REPLACEMENT**  
PART NUMBER: W13111701268

**Required Tool: (Not included)**


- Phillips Screwdriver

**⚠ WARNING**

**⚠ CAUTION:** To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


**Step 1**

Using a Phillips screwdriver, remove the ten (10) screws from the bottom of the unit.

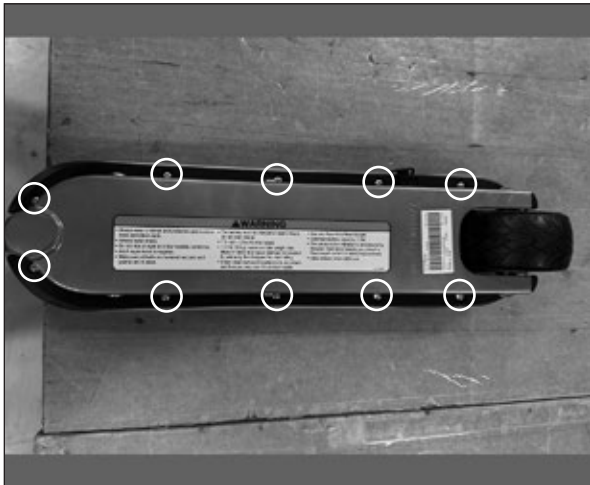

**Step 2**

Flip the unit over and lift the deck. Locate and disconnect the push button throttle from the controller.

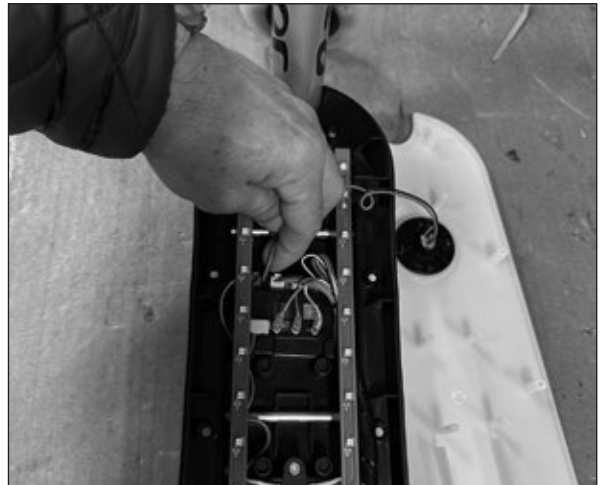

**Step 3**

Install the new push button throttle then reverse steps 1 and 2.

**ATTENTION: Charge battery 4 hours before using.**

**Need Help?** Visit our website at [www.razor.com](http://www.razor.com) or call toll-free at **866-467-2967** Monday - Friday 8:00am - 5:00pm Pacific Time.