

**Required Tools: (Not included)**


- A. Two (2) 19 mm Open Wrenches
- B. Phillips Screwdriver

**⚠ WARNING**


**⚠ CAUTION:** To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

**Step 1**

Using a Phillips screwdriver, remove six (6) screws from the deck. Remove the deck from the unit and set aside.

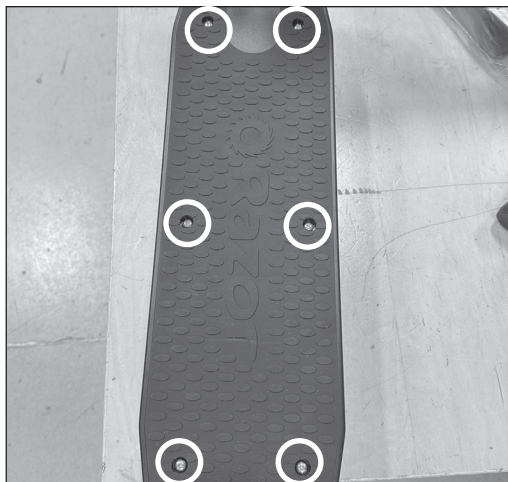
**Step 2**

Locate and disconnect the motor connectors from the controller.

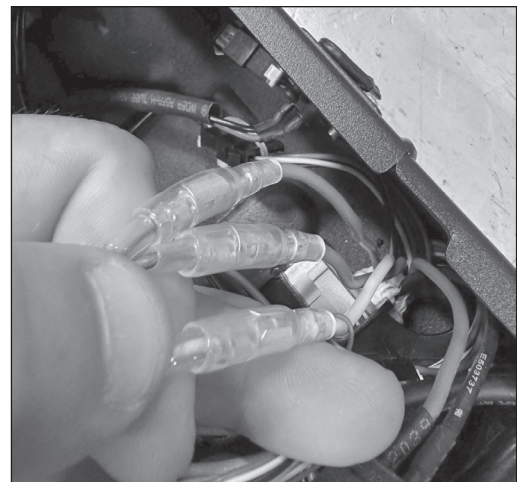

### Step 3

Using a Phillips screwdriver, remove the two (2) screws from the axle lock nut cover on each side of the scooter.

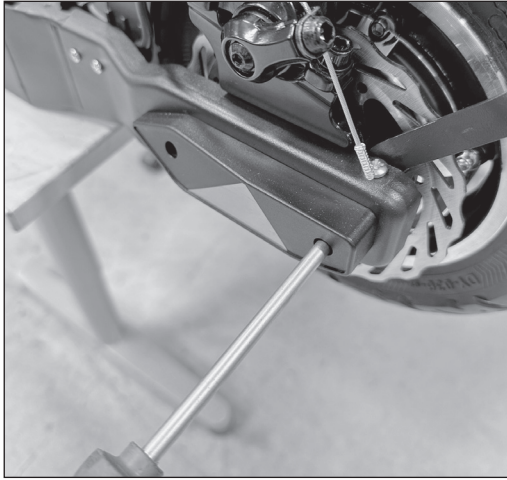

### Step 4

Using two (2) 19 mm open wrenches, loosen the lock nuts from the axle, slide the wheel down, and pull the wires from the battery compartment.



### Step 5

Reverse the procedures to install the new rear wheel/motor.

**ATTENTION: Charge battery 6 hours before using.**