

Tools Required: (Not included)

- A. 5mm Allen wrench
- B. 5mm open wrench

Step 1

Flip your unit on the side to have access to the chain tensioner

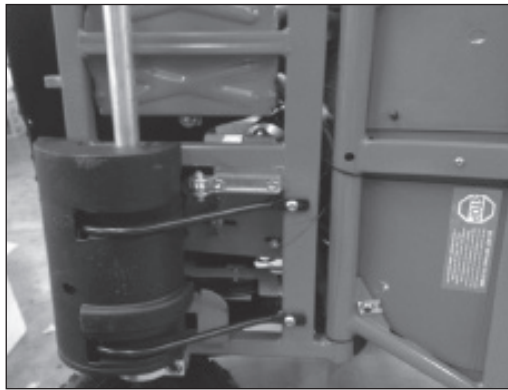


Figure 1

Step 2

Using a 5mm Allen wrench loosen up and remove the two hex bolts that hold the chain tensioner to the frame.



Figure 2

Step 3

Replace the chain tensioner with the new one.



Figure 3

Step 4

The Roller of the tensioner needs to be positioned on the outside of the chain.



Figure 4

Step 5

Line up the holes on the chain tensioner to the frame and secure it back with the 5mm hex bolts.

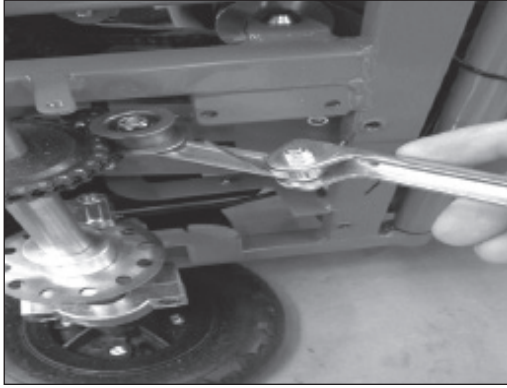


Figure 5

Step 6

This a self adjusting chain tensioner and there is no need for adjustment.

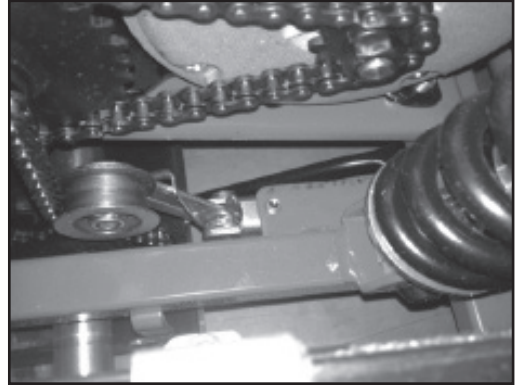


Figure 6