

Tools Required: (Not included)

A. Phillips head screwdriver

B. 5mm Allen wrench

C. 4mm open wrench

MARNING

CAUTION: To avoid potential shock or other injury, turn power switch <u>OFF</u> and disconnect charger before removing or installing the batteries. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Remove the 4 phillip screws at the back of the battery cover of your unit



Figure 1

Step 2

Remove two 4mm hex screws on the right side of the battery tray



Figure 2

Step 3

Remove two 4mm hex screws on the left side of the battery cover and 1 phillip screw located in the middle left side of the battery cover and remove the cover away from the unit carefullly not to pull the wires connected to the power switch or charger port.

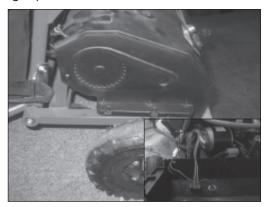


Figure 3

Step 4

Locate and disconnect motor connector from controller.

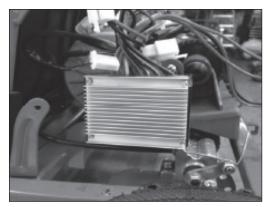


Figure 4

Step 5

Flip the unit on the side to get acces to the bottom part of the motor cover, Using a Phillips screw driver remove the screw located on the side ands using a 5mm Allen wrench remove the 3 hex bolts that hold it onto the frame and remove.

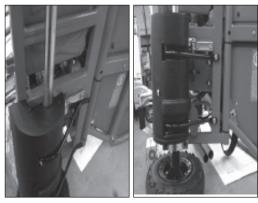


Figure 5

Step 6

Using a 5mm Allen wrench remove the 4 hex screws that hold the motor onto the frame and remove.

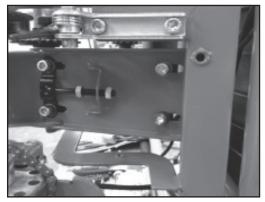


Figure 6

Step 7

Reverse the procedures to install.

ATTENTION: Charge battery 12 hours before using