

Required Tool: (Not included)


A. Phillips screwdriver

WARNING

CAUTION: To avoid potential shock or other injury, turn power switch <u>OFF</u> and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.


Step 1

Using a Phillips screwdriver, remove six (6) screws from the deck. Remove the deck from the unit and set aside.

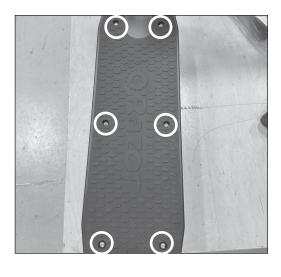

Step 2

Locate and disconnect the battery connector from the controller and charger port.

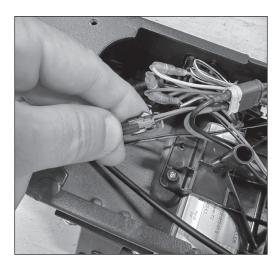

Step 3

Using a Phillips screwdriver, remove two (2) screws from the battery bracket. Remove the battery bracket and set aside. Remove the old/used battery and replace with new battery.





Step 4

Reverse the steps.

- Reattach the battery bracket on top of the battery.
- Reconnect the battery to the controller.
- Reposition the deck and attach with the screws that were removed in Step 1.

ATTENTION: Charge battery 6 hours before using.