


E90 Rear Brake Installation Instructions




1) Using a Phillips screwdriver, remove the (6) six screws on the deckplate




2) Remove the (2) two Phillip screws on battery strap and carefully remove battery from battery tray.

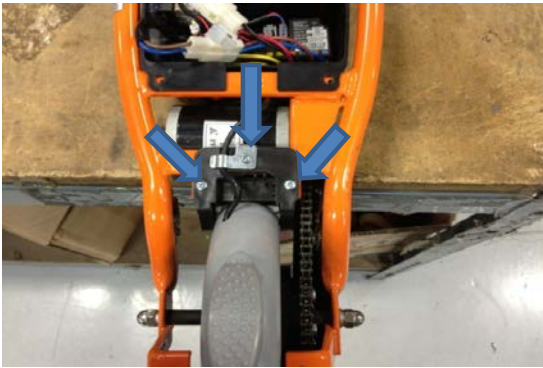

3) Remove the (3) three Phillips screws that hold the brake assembly onto the frame.

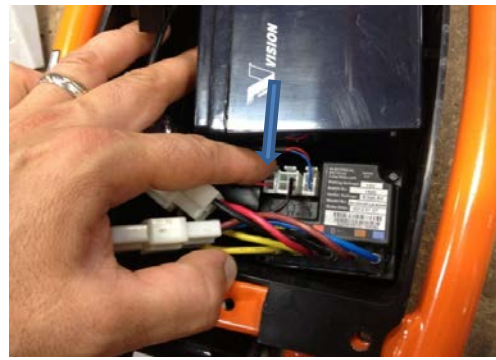

4) Locate the plastic brake connector and disconnect it from control module.

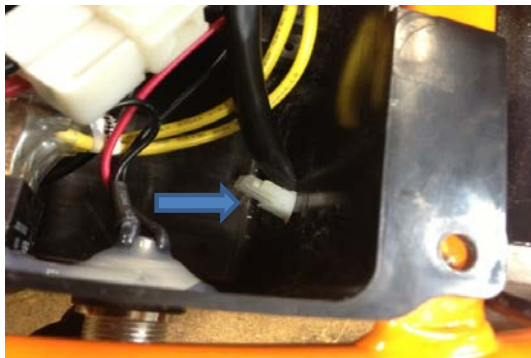

5) Carefully slide the brake connector through the opening located at the back of the battery tray and remove brake assembly.

Reverse above steps:

- * Insert the brake connector through the opening on the battery tray
- * Secure brake assembly to the frame and connect plastic connector to the control module
- * Carefully set battery back into battery tray and re-attach battery strap
- * Charge battery 12 hours before using