

Tools Required: Flathead screwdriver (Not included)

Step 1

Using a flat head screwdriver, carefully detach one of the end caps from the handlebar.

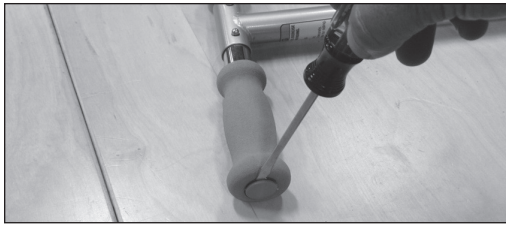


Figure 1

Step 2

Gently pull the end cap away from the handlebar; untie the knot at the end of the elastic cord and remove end cap.

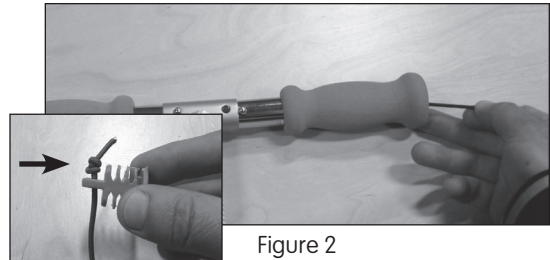


Figure 2

Step 3

Detach the other handlebar from the T-bar and pull end cap out of the handlebar. If necessary, use a flat head screwdriver to loosen end cap.

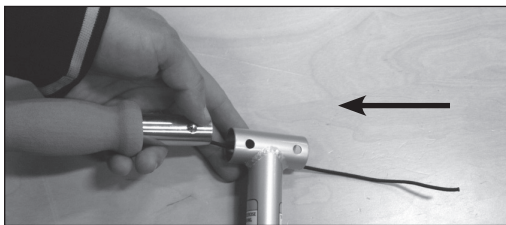


Figure 3

Step 4

Insert one end of the elastic cord into one of the handlebars. Slide end cap onto the cord and tie a double knot at the end of the cord. Set end cap into the end of the handlebar.

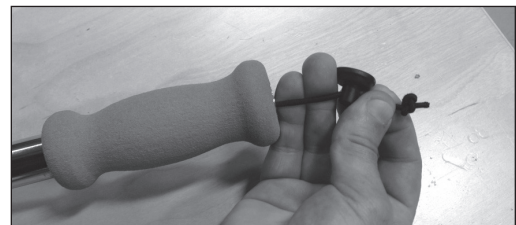


Figure 4

Step 5

Feed the other end of the elastic cord through the T-bar. Slide the other end cap onto the other end of the elastic cord and tie a double knot at the end of the cord. Set end cap into the end of the handlebar.




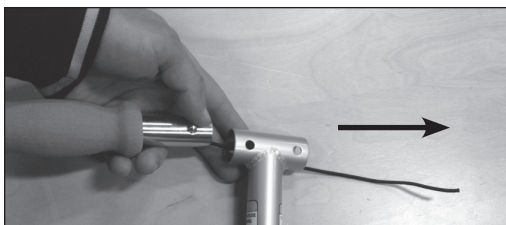


Figure 5


NOTE: Make sure BOTH handlebars are properly locked onto the T-Bar

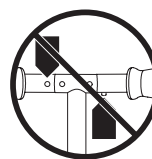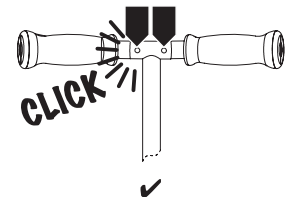

X

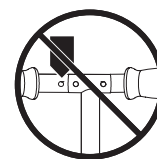

X

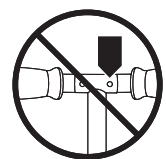

X