

POWER CORE E90 SPRINT BRAKE LEVER REPLACEMENT PROCEDURES

PART # W13112144011

Required Tools: (Not included)

- A. 5 mm Allen wrench
- B. 4 mm Allen wrench
- C. 8 mm wrench
- D. Long needle pliers
- E. Flat screwdriver

WARNING

CAUTION: To avoid potential shock or other injury, turn power switch <u>OFF</u> and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a 5 mm Allen wrench, loosen the bolts on the collar clamp. Remove collar clamp and set aside.




Step 2

Disconnect the brake lever switch from the controller.



Step 3

Using a 4 mm Allen wrench and a 8 mm wrench, loosen the bolt that holds the brake cable.

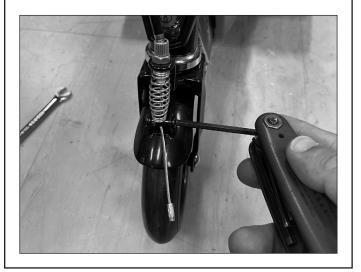

Step 4

Using long needle pliers, squeeze the end cap from the brake cable. Pull the brake cable out from the brake barrel guide.



Step 5

Using a 5mm Allen wrench, loosen the bolt from the brake lever. Pull the lever away from the grip and pull the grip from the handlebar.



Step 6

Using a flat screwdriver, remove the grommet from the handlebar and pull the wire out from the handlebar.



Step 7

Reverse the steps.

ATTENTION: Charge battery 12 hours before using.