

# C35 & C35 SLA FRONT FORK REPLACEMENT

C35 PART # W13113290023 C35 SLA PART # W13113291023

## **Required Tools: (Not included)**

A. 5 mm Allen wrench

B. 2.5 mm Allen wrench

## WARNING

**CAUTION:** To avoid potential shock or other injury, turn power switch <u>OFF</u> and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

#### Step 1

Set the unit on the floor or a work bench and fold the folding mechanism.




## Step 2

Using a 5 mm Allen wrench loosen the two (2) bolts from the clamp of the folding mechanism.



#### Step 3

Using a 5 mm Allen wrench loosen and remove the bolt from the top and remove it

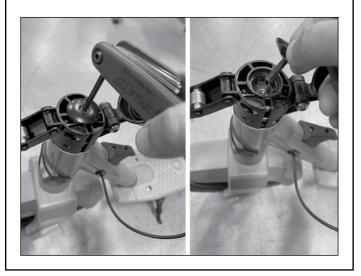


# Step 4

Remove the handlebars with folding mechanism out from the fork and set aside being careful not to damage the cables.




# Step 5

Using a 2.5 mm Allen wrench loosen and remove the two (2) bolts from the steering bolt cover, remove the cover and with a 5 mm Allen wrench loosen and remove the limiter steering bolt.

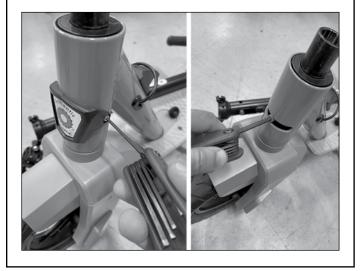

# Step 6

Remove the top washer and the compression ring and set aside, slide the fork down and out from the unit.

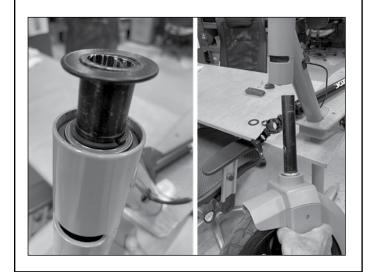

### Step 7

Reverse the steps.

ATTENTION: Charge battery 8 hours before using.