

GROUND FORCE® GO KART (V.1+) THROTTLE INSTALLATION INSTRUCTIONS

Tools Required: (Not included)

- A. 2.5mm Allen wrench
- B. 4mm Allen wrench
- C. 5mm Allen wrench
- D. Phillips head screwdriver

Figure 3

CAUTION: To avoid potential shock or other injury, turn power switch <u>OFF</u> and disconnect charger before removing or installing the batteries. Failure to follow these steps in the correct order may cause irreparable damage.


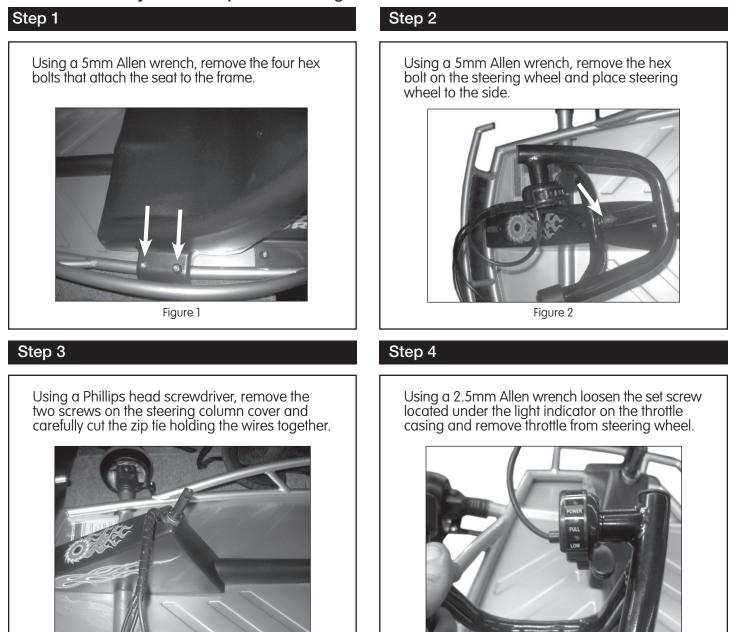


Figure 4

Need Help? Visit our website at www.razor.com or call toll-free at 866-467-2967 Monday - Friday 8:00am - 5:00pm Pacific Time.

Step 5

Using a 4mm Allen wrench, remove the two hex bolts on the battery cover and remove.

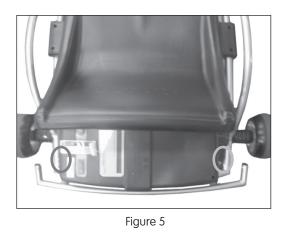

Step 7


Place the new throttle on the handlebar. Secure throttle in place by re-tightening the set screw under the light indicator. Reconnect the white plastic connector at the end of the throttle back into the white plastic connector on the control module.



Figure 7

Step 6

Follow the wires down from the throttle to the control module. Disconnect the throttle by depressing the tab on the white plastic connector attached to the control module (See Insert). Carefully cut zip tie and remove throttle

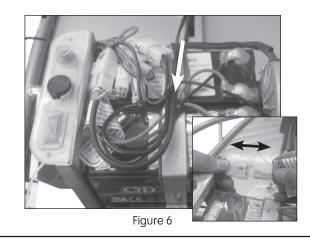

Step 8

Reattach the battery cover, steering wheel, steering cover and seat. Tighten securely into place using the same hardware previously removed.

ATTENTION: Charge unit <u>at least 18 hours</u> before riding.

v1 - 12/09