

CRAZY CART FRONT CASTER WHEELS INSTALLATION INSTRUCTIONS

W25143499149

Tools Required: (Not included)

A. 5 mm Allen wrench

Step 1


Carefully turn unit over and loosen the four (4) 5 mm hex bolts that attach the front caster to the frame; remove caster.



Figure 1

Step 3

Re-insert all four (4) hex bolts into the base of the caster before tightening the bolts to keep caster properly aligned with the frame.

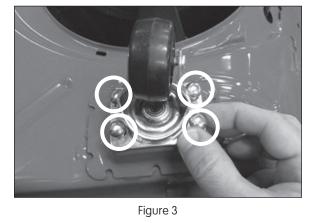

Step 2

Align the four (4) holes on the replacement caster with the four (4) holes on the frame.


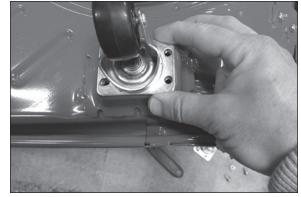


Figure 2

Step 4

Using a 5 mm Allen wrench, tighten the four (4) hex bolts until caster is firmly in place.

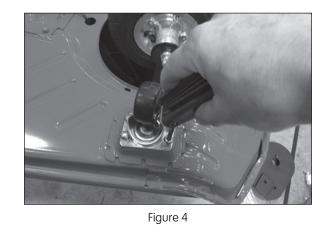

140124

Need Help? Visit our website at www.razor.com or call toll-free at 866-467-2967 Monday - Friday 8:00 AM - 5:00 PM PST.