

NOTE: If you received a control module AND throttle, make sure to replace BOTH parts on your unit.

Tools Required: (Not included)

- A. Phillips head screwdriver

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before attempting these procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Lift the Pocket Mod seat.



Figure 1

Step 2

Using a Phillips head screwdriver, remove the four screws in the seat compartment. Remove the seat compartment insert.



Figure 2

Step 3

Using a Phillips head screwdriver, remove the three screws along the front bottom of the seat fairing cover. Before removing the cover, disconnect the white plastic connectors on the wires to the power switch and charger port.



Figure 3

Step 4

Carefully cut the zip ties holding the wires together. Disconnect the remaining white plastic connectors attached to the control module by depressing the tabs.

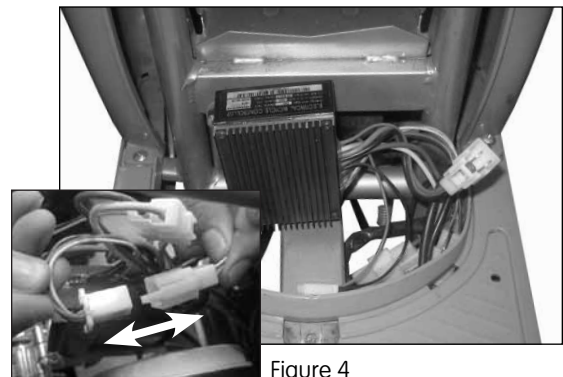


Figure 4

Step 5

Using a Phillips head screwdriver, remove the two screws holding the control module in place.

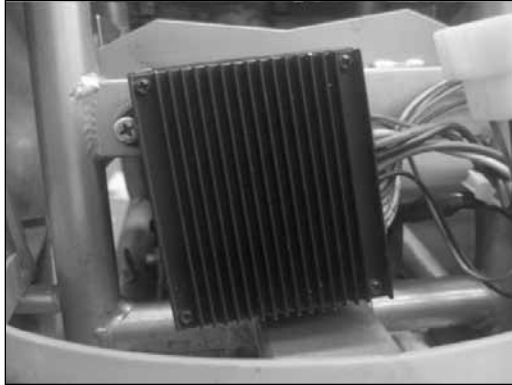


Figure 5

Step 6

Install the new control module using the same two screws previously removed. Reconnect the five white plastic connectors.

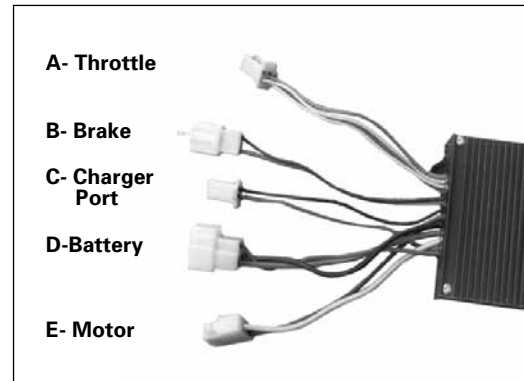


Figure 6

Step 7

Reverse steps:

1. Reattach the front seat fairing cover and secure with three Phillips screws previously removed.
2. Reattach seat compartment insert using the four screws previously removed and close the seat.

ATTENTION: Charge unit at least 18 hours before riding.