

Required Tools: (Not included)

- A. Phillips screwdriver
- B. 4 mm Allen wrench

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips screwdriver, remove the two (2) screws located under the seat right above the unit handle (circled in the image below).


**Step 2**

Lift the seat and pull back to remove it. Set seat aside.



Step 3

Locate and disconnect the battery from the controller.

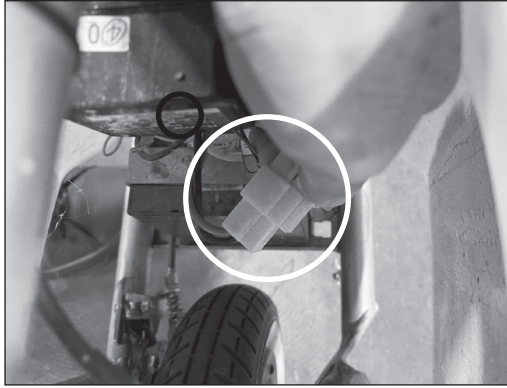

Step 4

Using a 4mm Allen wrench remove two (2) hex bolts from the battery bracket, remove the bracket and the battery. Set battery bracket and battery aside.



Step 5

Reverse the steps.

- Reattach the battery bracket on top of the battery.
- Reconnect the battery to the controller.
- Reposition the seat and attach with the screws that were removed in Step 1.

ATTENTION: Charge battery 6 hours before using.