

## Crazy Cart Chain Tensioner Replacement Procedures




(1) To have better access to the chain tensioner, Using a Phillips screw driver remove 7 screws from the motor cover.



(2) Remove 7 more screws from the other side of the cover.



(3) Remove 3 screw located on the chain guard and remove the chain guard.

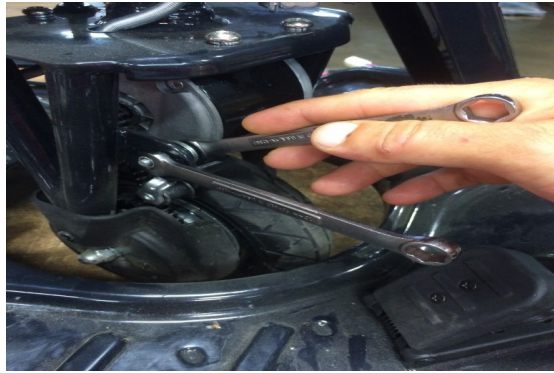

(4) Using two 10MM wrenches loosen up the lock nut that secures the tensioner on to the fork and remove it.



(5) Chain tensioner roller should always be on the outer side of the chain putting pressure against the chain.

**Reverse the procedures to install.**

**Attention: Charge battery 12 hours before using**