


Attention: Charge battery 12 hours before using

Step 1

Lift the seal and using a 5 mm Allen wrench, remove the two (2) hex bolts that keep the seat attached to the frame.

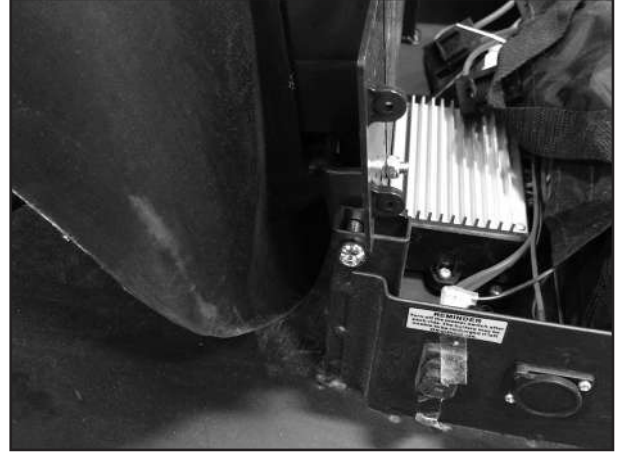


Step 2

Using a Phillips screwdriver, remove the seven (7) screws from the motor cover.

**Step 3**


Using a 4 mm Allen wrench, remove the two (2) hex bolts at the bottom of the motor cover and move the cover away from the frame.

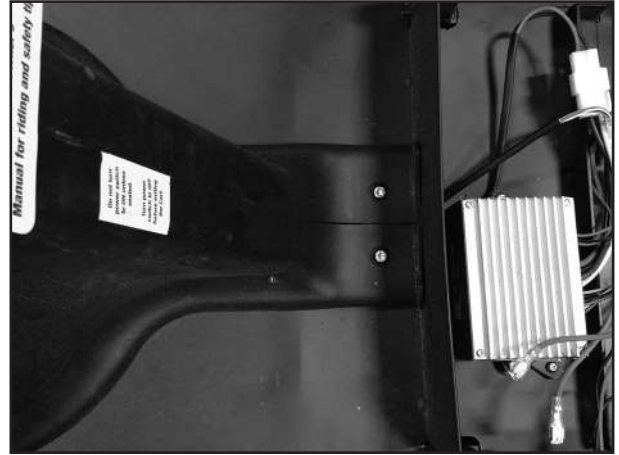**Step 4**

Using two (2) size 10 mm open wrenches, remove the lock nut from the outer side of the front fork and remove the tensioner. Install the new tensioner.

**Step 5**

Using a 4 mm Allen wrench, reinstall the two (2) hex bolts at the bottom of the motor cover and reinstall the cover.

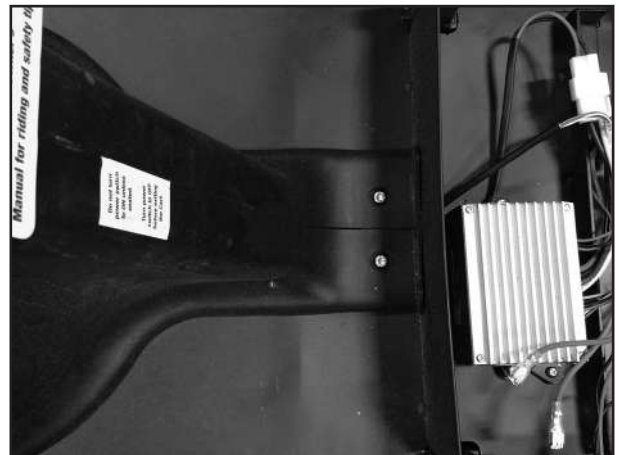

Step 6

Using a Phillips screwdriver, reinstall the seven (7) screws into the motor cover.

**Step 7**

Close the seal and using a 5 mm Allen wrench, reinstall the two (2) hex bolts that keep the seat attached to the frame.

