POWER A5
CHARGER PORT - POWER SWITCH REPLACEMENT PROCEDURES
PART # W13113202106

Required Tools: (Not included)

A. Phillips screwdriver
B. 4 mm Allen wrench
C. Flat screwdriver

⚠ WARNING

⚠ CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a Phillips screwdriver, remove nine (9) screws from the bottom of the deck.

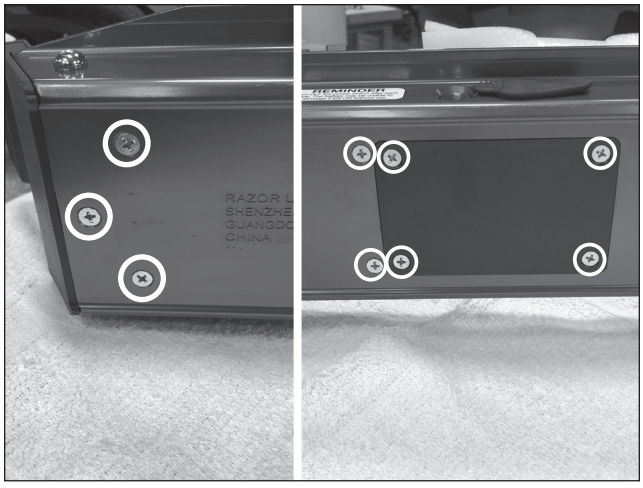

Step 2

Using a 4 mm Allen wrench, remove two (2) hex screws. One on each side of the deck.

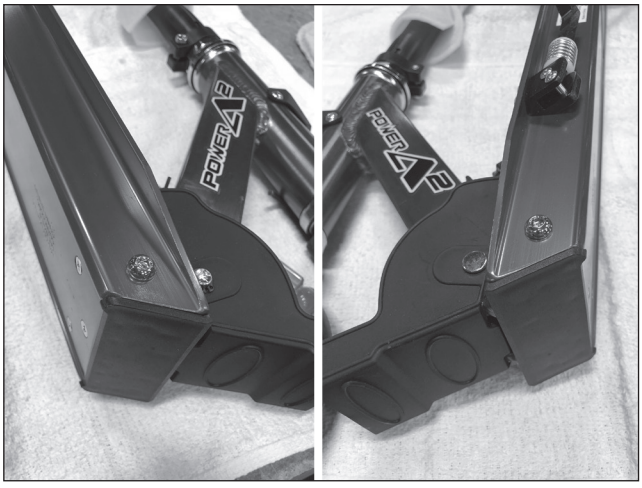

Step 3

Remove the plastic cover from the unit. Locate and disconnect the throttle wire from the controller.

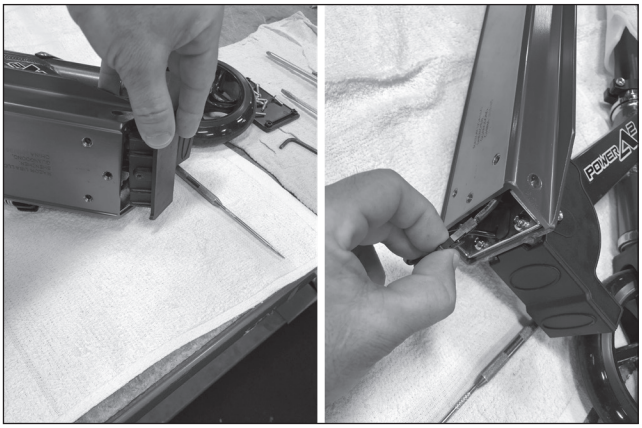

Step 4

Remove the grommet from the metal bracket. Push the throttle wire inside the opening.

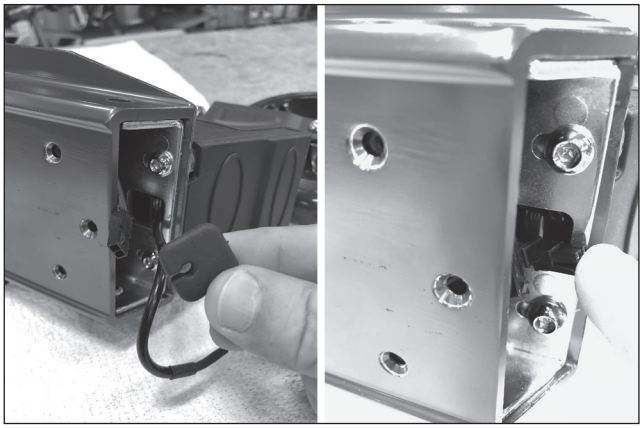

Step 5

Using a 4 mm Allen wrench, remove two (2) hex screws and pull the bracket out of the frame.

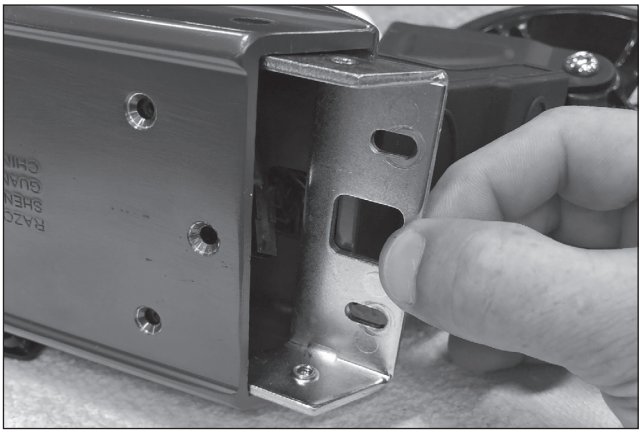

Step 6

Remove the controller cover to access the wires. Remove the grommet at the back of the tray.

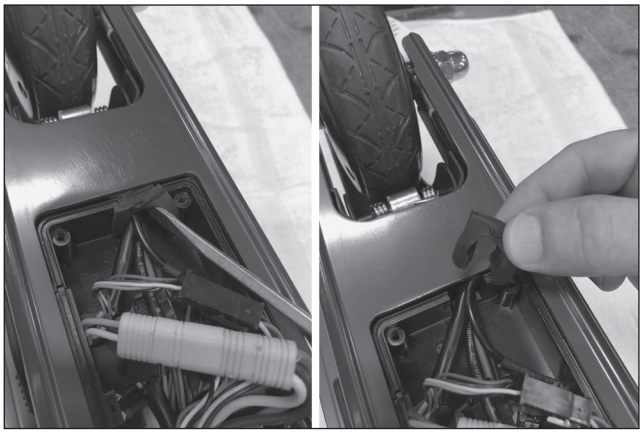

Step 7

Disconnect the three (3) wires from the back of the unit.

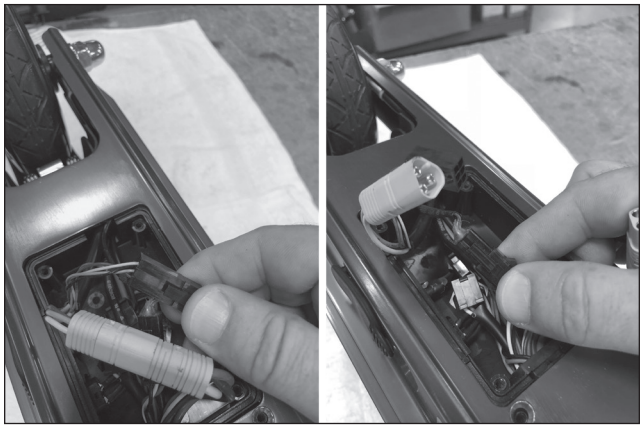

Step 8

Push down on the power switch and slide the battery tray out of the deck.

Step 9

Once the battery-controller tray is out the deck.

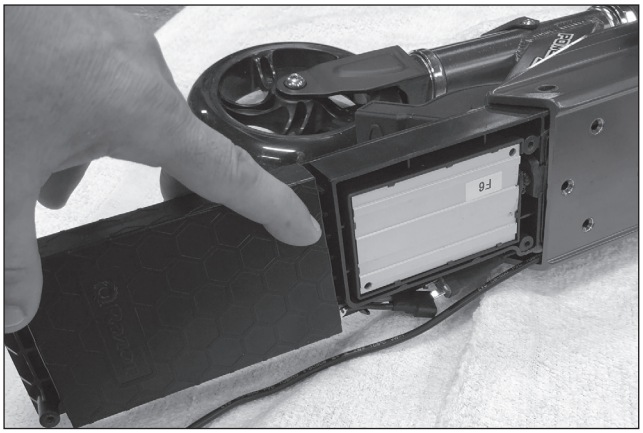

Step 10

Using flat screwdriver, lift and remove the plastic bracket that holds the power switch and charger port in place.

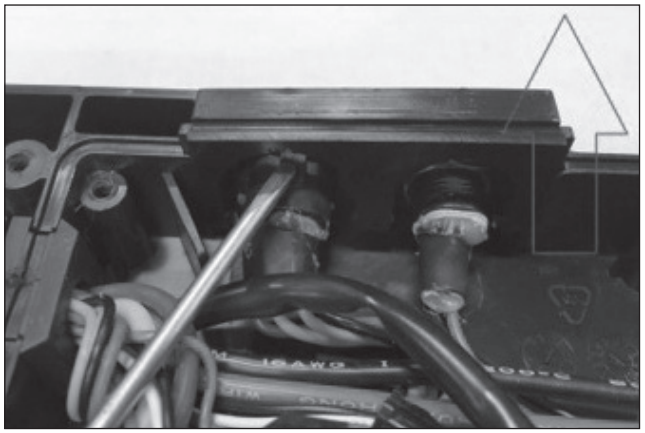

Step 11

Remove the silicone around power switch or charger port and push components out from the tray.

Step 12

Reverse the steps.

ATTENTION: Charge battery 10 hours before using.