


Crazy Cart 2014 Control Module  
Replacement Procedures



(1) Using a Phillips screw driver remove seven screws from each side of the battery cover and remove both side covers.



(2) Locate and disconnect all connectors from controller.

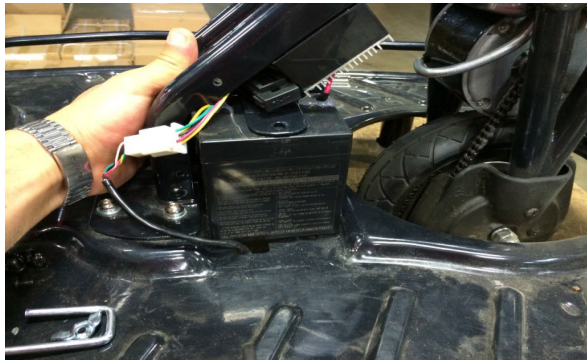

(3) To have better access to the controller remove the battery



(4) Using a Phillips screw driver remove the screw located on top near the power switch.



(5) Remove one more screw located at the bottom of controller and remove the controller.



(6) When installing your new Control Module before securing it with the screws make sure to run the two red wires thru the back of the controller and connect them to the two silver prongs on the power switch.

**Reverse the procedures**

- \* Secure the controller in place
- \* Place battery back in place
- \* Re-connect all connectors
- \* Re-attach Battery cover with screws

**Attention: Charge battery 12 hours before using**